User Manual

English

This manual covers all the details and explanations of the TEASI models TEASI ONE, TEASI ONE^3, TEASI PRO and TEASI VOLT.

The specific sections of the devices are easy to identify.

	ONE	ONE^3	PRO	VOLT	TEASI
Affects:	**only TEASI ONE**	**only TEASI ONE 3**	**only TEASI PRO**	**only TEASI VOLT**	**all models**

TO1401-2.1

Teasi - User Manual

Version 3.4.8

Contents

1. Getting to know your device 1
2. Starting the device 8
   2.1. First Startup 8
   2.2. Easy Mode – Full Mode 10
   2.3. Full Menu – Custom Menu 11
   2.4. Second and further startup 11
   2.5. Connection to E-bike 12
      2.5.1. Setting up E-bike account 12
      2.5.2. Troubleshooting for E-bikes with Brose systems 15
3. Main Menu 16
   3.1. Map 18
      3.1.1. Ski Map 23
      3.1.2. Sea Map 23
      3.1.2.1. Blue Target Arrow 24
      3.1.2.2. Projection Line 24
      3.1.2.3. Near interesting & Most Important Buoy (M.I.B.) 24
      3.1.3. Recursive Height Analysis (RHA) 27
      3.1.4. Suggested Assist Level Popup 27
      3.1.5. Assist level suggestion based on Heart Rate (HR) 28
      3.1.6. Navigation Popup 30
   3.2. Memory 30
      3.2.1. My Tours 31
      3.2.2. Favorites 33
      3.2.2.1. Manual alert for Favorite in Boat profile 34
      3.2.3. Importing Data & TEASI Tour 35
      3.2.3.1. Imported Tours 35
      3.2.3.2. TEASI Tour 37
      3.2.3.3. Imported POIs 40

3.2.4. Statistics 41
3.3. Fitness 43
3.4. Fitness (with HR) 46
3.4.1. Fitness based on HR Zones 48
3.5. Training 49
3.5.1. Heart Rate Zones 51
3.5.2. Training via Heart Rate Zones 52
3.5.3. Race Training 53
3.6. Destination 54
3.6.1. Address 54
3.6.2. Extended POI Search 60
3.6.2.1. Ski POI Categories 63
3.6.2.2. Sea POI Categories 63
3.6.3. Favorites 64
3.6.4. Map Point 65
3.6.5. Coordinates 66
3.6.6. Tours 66
3.6.7. Multiple Destinations 68
3.6.8. Ski Destination 72
3.6.9. Boat Destination 72
3.7. Route 73
3.7.1. U2U-Routing 75
3.8. Computer 75
3.8.1. E-bike Computer with Gear Recommendation 75
3.8.1.1. E-bike Light Management 76
3.8.1.2. Gear Recommendation 76
3.8.2. Dashboard 77
3.8.2.1. List of Available Teasi Computers 77
3.8.3. Speedometer 80
3.8.4. Sun Compass 81
3.8.5. Compass 82
3.8.6. Weather Forecast 82
3.8.7. Tide Computer 83
3.8.7.1. Selecting Reference Point 83

3.9. Settings 84
3.9.1. Maps & Clean Up Maps 85
3.9.2. System & Easy Mode – Full mode 88
3.9.2.1. Easy mode - Full mode 88
3.9.3. System & Full menu – Custom menu 89
3.9.3.1. Full Menu – Custom Menu 90
3.9.4. Accounts 91
3.9.4.1. Bike Pairing and Configuration 93
3.9.4.1.1. Additional Bike settings 95
3.9.4.2. Heart Rate Settings 96
3.9.4.3. Accounts in Easy Mode 97
3.9.4.4. Ski Account 97
3.9.4.5. Boat Account 101
3.9.5. Sensors 102
3.9.5.1. Compass 104
3.9.5.2. Barometer 105
3.9.5.3. Heart Rate Sensor Settings 106
3.9.5.4. Speed and Cadence (SAC) sensor Settings 108
3.9.5.4.1. Setting Wheel Size 110
3.9.6. Language 112
3.9.7. Date & Time 112
3.9.8. Sound 113
3.9.9. Screen 114
3.9.10. GPS Status 114
3.9.11. Info 115
3.9.11.1. Share Diagnostics Screen 116
3.9.12. E-bike Info 116
4. Connect Teasi to your Computer / The TEASI Tool 117
4.1. Troubleshooting for connecting Teasi devices with Mac OS X 10.11 (El Capitan) 118
5. Declaration of Conformity 119

1. Getting to know your device

Affects only TEASI PRO

Teasi Pro has 3 hardware buttons, two of them are placed on the left side of the device, one is on the bottom, below the display.

The lower button is responsible for switching on and off the device, and for locking the screen.

Long pressing the power button #changed

Long pressing this button will pop up the menu allowing the locking or the powering on or off, and switching off Bluetooth (when on) .

To reset your device, press and hold power button for at least 15 seconds, until the screen is completely black. After device is turned off, it can be turned on again.

When the screen is locked, no input can be taken besides pressing the power button again to unlock the screen, or power off the device. Under locked screen every navigation and process continues to run.

Upper button allows you to have a quick access to the most important screens of your Teasi Pro device: check Settings – System to see which screens can be set for quick access.

The button on the front of your device is for getting back in a menu, or getting to an upper level of the menu system.

Most of the application flow is handled directly on the screen.

Affects only TEASI ONE

Teasi One has 2 hardware buttons on the side of the device.

The lower button is responsible for switching on and off the device, and for locking the screen.

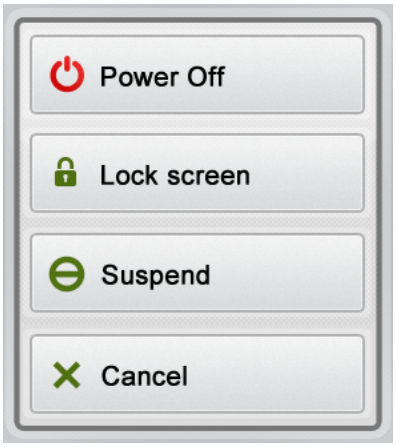

Long pressing the power button

Long pressing this button will pop up the menu allowing the locking or the powering on or off.

To reset your device, press and hold power button for at least 15 seconds, until the screen is completely black. After device is turned off, it can be turned on again.

When the screen is locked, no input can be taken besides pressing the power button again to unlock the screen, or power off the device. Under locked screen every navigation and process continues to run.

The upper hardware button is for getting back in a menu, or getting to an upper level of the menu system.

Most of the application flow is handled directly on the screen.

Affects only TEASI VOLT & Affects only TEASI ONE³

Teasi has 2 hardware buttons on the side of the device.

The lower button is responsible for switching on and off the device, and for locking the screen.

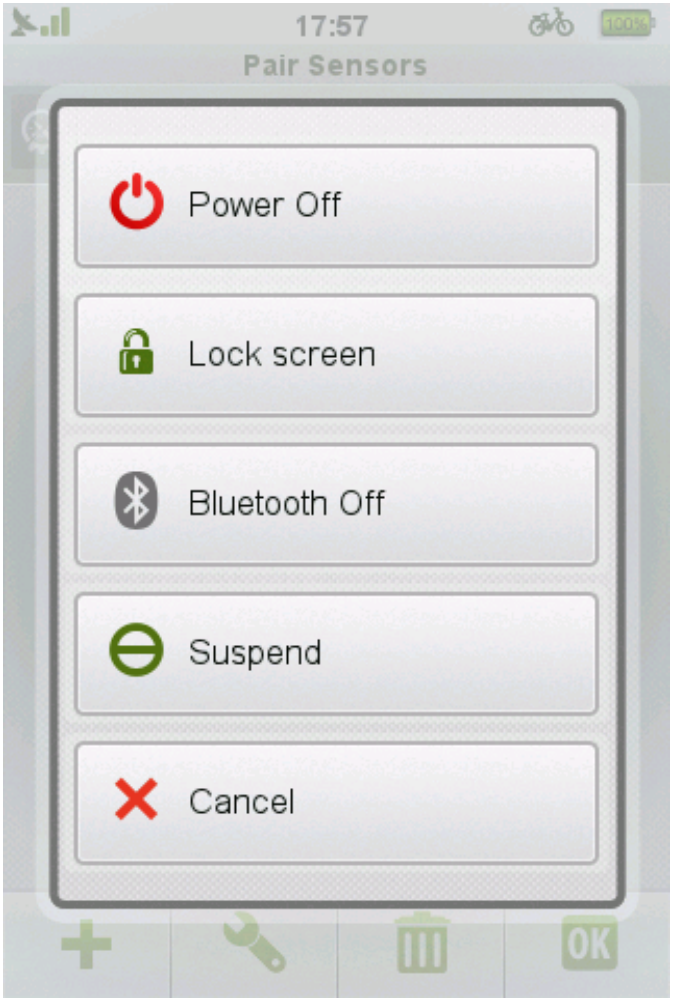

Long pressing the power button #changed

Long pressing this button will pop up the menu allowing the locking or the powering on or off, and switching off Bluetooth (when on) .

To reset your device, press and hold power button for at least 15 seconds, until the screen is completely black. After device is turned off, it can be turned on again.

When the screen is locked, no input can be taken besides pressing the power button again to unlock the screen, or power off the device. Under locked screen every navigation and process continues to run.

The upper hardware button is for getting back in a menu, or getting to an upper level of the menu system.

Most of the application flow is handled directly on the screen.

Affects all models

Direct selectors

Some of the settings can be chosen from only a few options. If the values can be described graphically or shortly enough, all values are available on the screen.

For example the From GPS / Manual settings is a direct selector

Tap one of the fields to choose the desired value.

List selectors

When more options are available, only the actual value is shown; the current value can be changed by tapping on it. When tapped, a list will appear with the available options.

List selector

Tap on one option to select it.

Sliders

When a feature can have values that can be assigned to a scale, the software will show sliders that look like analogue potentiometers to set the desired value.



Slider

If the values are not shown, the values are increasing from the left to the right. You can select the right value by dragging the slider directly to the desired value.

Checkbox switches

When a function can only be enabled or not, a switch is used. The field contains the name of the setting, and there is a tick on the right to show whether the function is active or not.

Checkbox switch

When the tick mark is not shown, then the function is disabled. When it is displayed, the function is enabled. Tap on the field to change the status.

Virtual keyboards and numeric pads

As mentioned earlier, the main input method is via the touch screen.
This means that an on-screen keyboard (OSK), and numeric pad is needed for proper input possibilities.

ABC keyboard

The keyboard is for any letter-based input.
The alphabetic keyboard in the software does not contain special characters, but they can be substituted with their simple versions.

This means that if you want to search for the city of “Münster”, you can simply type “Munster” to find it.

The keyboard only allows possible characters to be tapped

Numeric Pad

Entering numbers is possible via the numeric pad.
It is also available from the ABC keyboard by the button “123”.

Numeric keypad

Power management

Power management is for saving power for the device. If no movement is detected, and there is no ongoing recording, the device will ask whether to suspend or power off after the set time (default is 10 minutes).

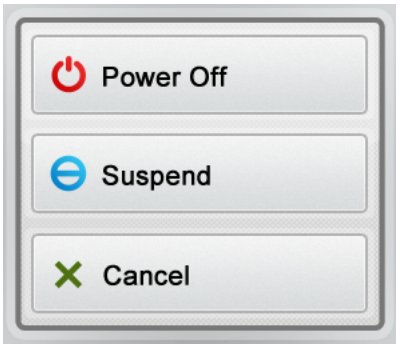

Suspend popup

If suspend is chosen, the device will go to sleep mode, so that the ongoing recordings and processes will be paused, but they can be continued by waking up the device via the power button. If power off is selected, these processes will be ended, for example a recorded track will be saved with and end point where the device has been turned off.

Swipe function

Swipe function is the right tool for fast and accurate navigation inside our software.
This function allows the user to get back to previous screen(s) easily.
The method is to tap on the top of the screen, and with a pulling move, move down thumb until previous screen is reached.

Swipe function is by pulling down the previous screen from the top

If you decide to stay on the same screen, just don't finish but reverse the movement.

Note: This function is disabled on main screen.

2. Starting the device

2.1. First Startup

After the boot of the device and the initialization process have completed, the **language** selection screen appears.

Tap on a language to choose your own language, then tap the OK ( ) button on the bottom to move to the next screen.

Supported languages are: Czech, Danish, Dutch, English, Finnish, French, German, Italian, Hungarian, Norwegian, Polish, Portuguese, Slovenian, Spanish and Swedish. See 3.9.6*Language* for details.

After selecting a language, the **End-User License Agreement** will show. After reading and accepting the EULA by pressing OK ( ) on the bottom of the screen, date & time screen will show.

Affects only TEASI VOLT

In Teasi Volt there is also a Share Diagnostics feature for software improvement. On this screen it is possible to decide whether to share diagnostic info.

The data Teasi collects is completely anonymous, and does not affect the privacy of users in any way.

11:51
Share Data
Do you agree to share diagnostic information anonymously for product improvement?
Share diagnostic info
This setting can be changed later under: Settings - Info - Share.
OK

Share Diagnostics screen

This setting can also be modified later on. See 3.9.11.1*Share Diagnostics Screen*

It is also essential to set up your own **Profile** or select a preset one, so Teasi will be able to navigate using the most preferable roads for you.

Preset Profiles

See 3.9.4 *Accounts* for details.

Affects only TEASI ONE & Affects only TEASI PRO & Affects only TEASI ONE³

It is also essential to set up your own **Profile** or select a preset one, so Teasi will be able to navigate using the most preferable roads for you.

Preset Profiles

See 3.9.4 *Accounts* for details.

Affects all models

In the next step **Date and Time** format and value can be set by tapping on the fields.

Time and Date can be automatically set using the GPS signal.

Select your preferred Date (Day / Month / Year, Month / Day / Year, or Year / Month / Day), and Time (AM/PM or 24 hours) format, and if manual settings are chosen, then set the Date and Time.

Date and time settings

Affects only TEASI ONE & Affects only TEASI VOLT & Affects only TEASI ONE³

2.2. Easy Mode – Full Mode

At the end of the first startup, operating mode can be selected. The options are Easy mode, and Full mode.

The Easy mode is a compact layout with the essential features of the Teasi software, which makes the device a simpler, yet more effective and more comfortable tool to use.

Full mode containing all the features can be set again by selecting Full mode in Settings – System menu.

In Easy mode you can access only Map, Search, Memory (and some limited, easier Settings) features.

In search, the Coordinates and Tours features are disabled as the most complex destination modes.

Tour navigation can still be started from Memory -> My Tours, or Imported Tours.

When startup procedure is completed, the main menu will welcome you, with a clock, a GPS signal icon, and battery strength indicator on the top of the screen.

Affects only TEASI PRO

2.3. Full Menu – Custom Menu

At the end of initial startup, and in System settings, you can change between Full menu, and Custom menu. Full menu contains all available features on the device, and Custom menu can be set to show only the essentials, thus gaining speed and comfort in everyday use of the device. Select “Enable Custom Menu” by ticking it, then tapping on “Select Menu Items”.

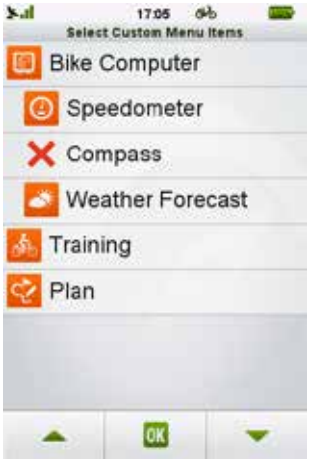

Selection of Custom Menu Items

By default, Custom mode contains all available features.
Tap on a menu item to select / unselect it. If a red ‘X’ is shown next to a feature, then it will be hidden in the Main Menu.

Affects all models

2.4. Second and further startup

After the initial startup, the device boots directly into the main menu.
You can change the values set in the first startup in the settings submenu, covered later in the manual.

Affects only TEASI VOLT

2.5. Connection to E-bike

Since Teasi Volt is especially made to work with connections with E-bikes, menu behavior is set to adapt to both connected and not connected situations.

In addition to the main menu changing, the status bar is also changed in style and provided information.

Menu, status bar, and Computer info with connected E-bike

On the status bar the E-bike profile icon is shown, and the battery percentage shows the E-bike battery status, not the device.

Note: Teasi Volt device is charging while connected to E-bike.
Computers are also expanded to handle E-bike related information – explained in section 3.8 **Computer**.

2.5.1. Setting up E-bike account

When E-bike is connected to Teasi Volt for the first time, device will notify that this E-bike is not currently paired to any profile.

No Account paired

Selecting 'No' will not pair any account to this E-bike.
In this scenario, E-bike pairing can be done by pressing in "Pair" under the preferred bike account in Settings → Accounts.

Selecting 'Yes' there will be two options:

Create or Select Account to be paired

Pressing "Create" will create a new bike account, and automatically pair the connected E-bike to it.

After the account is created, its attributes can be edited. When account is configured, press "OK" to save the changes.

Pressing "Select" will show the accounts that can be used for pairing the currently connected E-bike.

Available accounts for pairing E-bike

When account is selected, Teasi will pair it with the current E-bike.

From this point on, bike will be recognized, and Teasi will offer paired profile for use. When a different account is already paired to Teasi Volt when connecting the E-bike, the device will inform about this

Another account is paired

When there are multiple accounts that are paired with the bike, a list will be shown with all paired accounts.

When only 1 account is paired, and “Yes” is selected, Teasi will change to that account.

Selecting “No” will keep the current functioning. Teasi will inform to use paired account for E-bike functionality.

Select paired account

When paired profile is in use and bike is connected, or Teasi changed to the correct profile, Teasi will inform in a pop-up:

E-bike connected and functioning correctly

This pop-up can be dismissed by pressing “OK”, or it is dismissed automatically after 10 seconds.

2.5.2. Troubleshooting for E-bikes with Brose systems

In some cases it may happen that the Teasi Volt is unable to connect with an E-bike building Brose systems, especially if the Teasi Volt is connected before the bike is turned on.

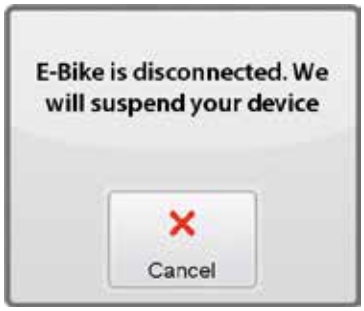

E-bike connection was not successful

The problem can usually be recognized by the bike lamp starting to flash with high frequency, when the connection should be established.

In this case, please:

1. Remove Teasi Volt from cradle.
2. Power off Brose bicycle by long pressing the Power button on battery unit.
3. Power on Brose bicycle by pressing the Power button on battery unit.
4. Put Teasi Volt back on Brose bike.
5. Connection should be set up successfully.

3. Main Menu

Affects only TEASI ONE & Affects only TEASI ONE^3

Main Menu of BikeNav Teasi One

From the Main Menu you are able to access all the feature of Teasi.
In the next sections you will be able to learn what you are able to do with this device and have the most beautiful experience during your outdoor activity.

Affects only TEASI PRO

Main Menu of BikeNav Teasi Pro

From the Main Menu you are able to access all the feature of Teasi.
In the next sections you will be able to learn what you are able to do with this device and have the most beautiful experience during your outdoor activity.

Affects only TEASI VOLT

From the main menu you are able to access all the feature of Teasi.
Main menu in Teasi Volt is displayed in 2 different ways:
When there is no connection with E-bike, the map button will be transparent, displaying the underlying map of current location for easier orientation.

Main menu of BikeNav Teasi Volt without E-bike connection

When there is a connected E-bike transmitting data, the main menu changes to provide information about the status of the E-bike. In this case the bike computer is transparent so battery information of E-bike is visible from the main menu.

Main menu of BikeNav Teasi Volt with E-bike connection

Affects all models

3.1. Map

Map screen

Map is the core of Teasi, displaying the road network and your current location on this map.

It gives you also basic information about your tour and during the navigation it shows you all the details about your routing.

When there is no navigation on-going, on the top of the screen you can find a compass, and two changeable fields: by default they are 'Speed', and 'Distance to Destination' (which actually shows you information when you are navigating to reach a target place).
They can be easily changed by tapping on them and choosing from the upcoming list of available computers.

Map can be panned by tapping on it, and zoomed in and out via the zoom buttons (and)

Jumping back to the current location is possible by the current location button ( ). These buttons will disappear after a while; they can be brought back by tapping on the screen again.

At the bottom of this screen there are additional buttons: your current location can be stored as favorite ( ) (this button will prompt whether to save as a favorite), you can start to record your tour ( ) (when you are moving, a red line will show your recorded path), and you can open the Search menu also from the Map screen ( ).

When there is an ongoing recording, a point can also be saved as POI, not only as a favorite. This way it will be attached to the track, and can be opened through the track itself (Memory → My Tours).

Add point as POI or Favorite

During **Navigation** the behavior of the Map screen is slightly different.

Map screen during Navigation

In the upper left corner you will get the next turning instruction to be followed, with the distance to the turning point.
Next to it there are still the two bike computers that provide information about your activity.

They can be easily changed by tapping on them and choosing from the upcoming list of available computers.

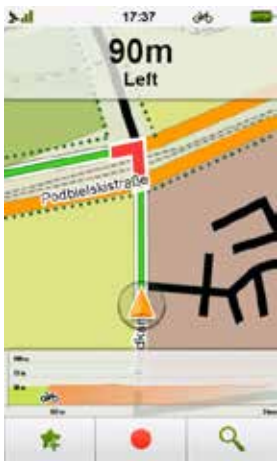

Map during turn instruction

During navigation, when a turn is approaching, it is displayed in a full-screen manner, so turn is as simple and obvious as possible. When turn is taken, Teasi will get back to normal mode.

The map can still be panned and zoomed.

At the bottom of the screen you can see the altitude graph of your route.
You will be able to see on the graph your current position and which part is still ahead. You can hide the altitude graph by dragging on the left of the screen, or tap back to show it again.

Points of Interests, alias POIs can be displayed and selected on the map. The POIs will be shown on map when the right settings are used (this is better explained in Settings – Maps chapter).

Map Screen with POIs

To select POI on map, tap on a POI indicated visually by its category icon.

POI Details

This way the POI Details screen is opened, showing useful information (name, address, direction) about the POI. Tap on 'Go' icon to start navigating, and tap on 'Map' icon to show on map.

When more POIs are close to each other, they are visually grouped with this sign: . Tapping on this icon will open the Multiple POI selection screen.

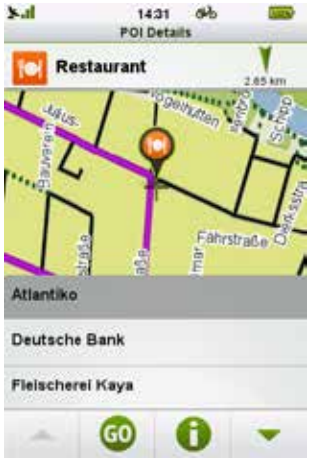

Multiple POI selection

This screen lists the POIs available in the vicinity of the tapped area. Tapping on one of them will bring the map over the location of the desired POI. When the right POI is selected, tapping on 'Go' ( ) will start routing, and tapping on information ( ) will bring up the POI Details screen.

POI Details

Note: POIs without name will show their category as a name (for example "Café/Pub"). To separate POIs with same name you can use their address, or direction.

Favorites can also be shown on map.

Favorites shown on map

The favorites will be shown on map, if the right settings are used (this is better explained in Settings – Maps chapter).
The favorites can also be grouped when they would fit next to each other.

A group of favorites will be shown by the sign: Tapping on it will result in a list containing nearby favorites.

Favorite POI Details

This screen lists the Favorites available in the vicinity of the tapped area. Tapping on one of them will bring the map over the location of the desired Favorite. When the right Favorite is selected, tapping on 'Go' ( ) will start routing, and tapping on information ( ) will bring up the Favorite POI Details screen.

When a track is saved as a favorite, navigating through map will navigate to the start point of track. To navigate not just to the track, but also on the track, select it from the Favorites in Memory.

3.1.1. Ski Map

When Ski account is used, map screen also changes to ski mode.

Ski map with Ski Pistes and Winter Skin

In addition to winter skin, the ski pistes are shown. A ski piste number is also shown next to the piste when available.

Ski lifts are represented as POIs, and can be disabled when not working.

Piste difficulties are also displayed via the color of the pistes.
When there is no official difficulty, Teasi calculates a difficulty based on the characteristics of official difficulties. In this case, a warning icon informs the user about this.

3.1.2. Sea Map

Sea Map with Compass

When a Boat type account is selected, map screen also changes into boat mode. Instead of the elevation profile a compass is displayed on the bottom of the map screen.
This computer has 2 set computers: Speed, and Course.

"Speed" will show current speed in used unit (Metric/Imperial/ or Nautical – if set under Boat Account).

"Course" will display current course, where 0° (or 360°) is heading to North.

This compass represents the current direction the device is heading.
Compass can be hidden by tapping on it. Tap on the arrow on the side to display the compass again.
In addition to map scale, range circles have also been introduced to make estimations easier during sea navigation. Distance from each circle is presented on the circles themselves.

3.1.2.1. Blue Target Arrow

When there is an ongoing navigation, a blue arrow is also placed on the compass. This arrow shows the direction to the next set destination, based on current heading.

To reach the next destination, keep the blue arrow in the middle of the screen, so that it covers the GPS cursor.

3.1.2.2. Projection Line

Based on current speed and heading, a small blue projection line is also displayed for better orientation.

Also, this line serves as a basis for Most Important Buoy feature that alerts the user when heading to any dangerous or restricted situation.

3.1.2.3. Near interesting & Most Important Buoy (M.I.B.)

Sea Map with highlighted near interesting Buoy

During boat mode, in the top-left corner the nearest interesting objects are shown (e.g. notice marks, buoys, harbours, and alerts).

On the Map Screen, the currently shown item is highlighted in white.

When dangerous or restricted objects are nearby, the top-left corner will become red to indicate the possible danger or restriction.

Most Important Buoy Alert

When user is not on map screen, alert is shown in a Pop-up.

Pressing “OK” will “snooze” that alert category for 30 seconds.

Most Important Buoy Alert Pop-up

To disable alert pop-ups, uncheck “Navigation Pop-up” option in Settings→Maps.

Affects only TEASI VOLT

3.1.3. Recursive Height Analysis (RHA)

Teasi Volt uses Recursive Height Analysis (RHA) for accurate E-bike range calculation and display.

In this way the areas that can be reached with current battery level are presented on map screen.

The area covered by the RHA darkens as getting further from current location. These areas can also be reached, however more battery will be drained during the process.

Locations outside the RHA area cannot be reached with the current charge available in the battery and the current assist level in use.

Map display with Recursive Height Analysis (RHA)

RHA calculation can be turned on - , or can be turned off - inside the Map Screen.
Calculation of RHA area is also indicated on this button, when calculation is over, the RHA layer is displayed.

3.1.4. Suggested Assist Level Popup

When current assist level is too high based on battery capacity and remaining distance to destination, Teasi Volt will notify about this problem and offer a new assist level that is calculated to be sufficient for finishing the route.

Warning to lower assist level for reaching destination

If there is no assist level that lets the user finish the route, a recalculation will be started for a route that can be finished with currently remaining battery level.

Recalculating route for optimal battery saving

If there is no possible route that can be completed with the current battery level, the application will warn: “Not enough battery power to reach the destination. You still have power for the next X km/miles at the lowest assist level”, where X is calculated based on the current available battery.

3.1.5. Assist level suggestion based on Heart Rate (HR)

During exercise, Teasi constantly monitors the current Heart Rate value, if you are connecting a heart rate monitor.

If there is a sudden rise in heart rate, Teasi will alert.

Sudden Heart Rate change warning

Teasi will also alert, if this value tends to get too close to the setting of “Maximum Heart Rate” to increase the assist level.

High pulse warning

If this does not provide the eligible support, and heart rate keeps rising, Teasi will suggest to “full stop” the exercise.

To calibrate this feature, go to Settings → Account Settings → Heart Rate Settings. Set an Age and Gender for preset HR values, and modify the HR values if needed.

Teasi will alert when the Maximum of the training HR zone is close to be reached.

Affects all models

3.1.6. Navigation Popup

If you have an ongoing navigation, but the device is not on the map screen, and a turning instruction is approaching, the device will show a popup message with the related instruction.

Navigation Popup

If you tap on the instruction itself, the map screen will be displayed to show the details of the navigation.
If you tap outside of the popup, it will just fade away and you will return to your previous screen.

3.2. Memory

Memory is the menu where you can reach your own Tours and Favorite places you have stored on Teasi.
Opening this menu, you have the possibility to choose between “My Tours”, “Favorites”, “Imported Tours”, “Imported POIs” and “Statistics” submenus.

Memory

3.2.1. My Tours

My Tours contains all your tours recorded with the Teasi device or the routes you have planned and saved.

My Tours

On the bottom of the screen you can choose to order the tours by distance ( ) (this way the shortest tour will be on top), or by time ( ) (this way the latest tour will be on top).

You can browse the list via the up and down arrows that are only available if the list contains at least 9 items.
The tours are recorded with the timestamp as a name, so they can be easily identified later.

Tap on a tour to see its details, and modify it. On the first tap it will be shown on the map.

Details of the Tour shown on map

To change its name and type, tap on the name on the top of the screen.

After changing the values, press OK (OK) to commit your changes.

On the bottom of the details screen there are additional options.

With the arrows (◄ and ►) you can see further data about the track, altitude and speed graphs are available.

With the “Go” button (GO) you can start navigation to the track, and with the bin icon (🗑) you can erase the track from your device.

The tours are saved in GPX and FIT format, and can be drag and dropped to computer or bikemap.net account via Teasi Tool.
Tracks can be: Imported, Exported, Uploaded, and back up can be made of tours recorded by the user.

Further information about connecting Teasi device to computer can be found in chapter 4.

3.2.2. Favorites

'Favorites' shows your favorite places that you have stored on Teasi.

Favorite Tours and POIs

This can be achieved in three ways: you can save your positions from the Map or you can store Point Of Interests (POIs), Addresses or coordinates as a favorite also. The third way is to add a tour to favorites. The track will be copied into favorites.

On the bottom of the screen you can choose the sorting method by alphabet (A-Z), reverse alphabet (Z-A), or by time ( ) (this way the latest favorite will be on top).

You can browse the list via the up and down arrows that are only available if the list contains at least 9 items.

Tap on a favorite to see its details, and modify it. On the first tap it will be shown on the map.

Details of Favorite shown on Map

To change its name and type, tap on the name on the top of the screen.

Edit Favorite

After changing the values, OK ( ) commits your changes.

On the bottom of the details screen there are additional options. You can start navigation to the favorite item, and with the bin icon ( ) you can erase it.

Note: Erasing a track from favorites doesn't erase the track itself.

3.2.2.1. Manual alert for Favorite in Boat profile

Sea Favorites with Manual Alert

When Sea Mode is active, and "Add to favorites" is pressed, other 4 Favorites icon presented (alert, fishing, dock, harbor).

For Manual alert, select the "danger" icon ( ).

When location of Manual alert is in the projected position, device will alert via pop-up (or via red top-left right alert when on map screen)

Manual Favorite Alert

3.2.3. Importing Data & TEASI Tour

3.2.3.1. Imported Tours

Imported Tours contains the tracks that weren't recorded on your device but created elsewhere and imported via computer. If you don't have any yet, the device will notify you.

You can download GPX tracks to the device

To import tours:

The simplest and easiest way for importing tours is connecting the device to computer via Teasi Tool. With Teasi Tool tracks can easily be drag and dropped or copied to and from the device, even from bikemap.net directly.

Usage of Teasi Tool is explained in chapter 4.

How to import tours manually:

Connect the Teasi device to a computer.
Create a folder on the device inside the BikeNav folder called "ImportedTrips", if not already existing.
All imported tours must be placed here (**"BikeNav\ImportedTrips"**) to be able to see them on the Teasi device.

How to import tours from SD card:

Open the SD card on your computer.
Create a folder on the SD card inside the BikeNav folder called "ImportedTrips", if not already existing.
All imported tours must be placed here (**"BikeNav\ImportedTrips"**) to be able to see them on the Teasi device.

When you have imported tours, these will be shown inside this area.

Imported Tours

On the bottom of the screen you can choose the sorting method by alphabet (A-Z), reverse alphabet (Z-A), or by distance ( ) (this way the shortest route will be on top).

You can browse the list via the up and down arrows that are only available if the list contains at least 9 items.

The tours are recorded with the timestamp as a name, so they can be easily identified later.

Tap on a tour to see its details, and modify it. On the first tap it will be shown on the map.

Tour details

To change its name and type, tap on the name on the top of the screen. After changing the values OK (

) commits your changes.

On the bottom of the details screen there are additional options.
With the arrows (and) you can see further data about the track, with the “Go” button (

) you can start navigation to the track, and with the bin icon ( ) you can erase the track.

When an imported track is presented with an icon with a green number on it (

), it means the track is a TEASI Tour *track*, that contains additional data compared to a regular track, such as POIs with Pictures and descriptions.

3.2.3.2. TEASI Tour

TEASI Tour tracks are extended tours that are based on regular GPX files, but they may contain numerous additional features such as:

- Track description
- Track picture
- TEASI Tour POIs with picture and description

Teasi also has an integrated connection with the bikemap.net and wandermap.net websites, therefore any track created or stored on those sites can be easily imported to any Teasi device via Teasi Tool that can be downloaded from www.teasi.eu website.

Inside Teasi Tool Select “Tours” → “Bikemap.net/Wandermap.net” ( ) to log in or register to bikemap.net, or you can visit *www.bikemap.net* to manage your tracks, or to add already existing ones to favorites

After importing, on device open Memory -> Imported Tours to see TEASI Tour tracks.

Imported Tours containing TEASI Tour tracks with pictures and POIs

Tracks containing pictures and POIs are TEASI Tour tracks.

Tap on the track to see its overview.

Overview of TEASI Tour track

Track can be rename d by tapping on name of the track

Editing name and type of track

Press right arrow ( ) for tour details

11:20
Tour-Details
Der Tauernradweg ist ein ca. 310 km langer Radfernweg. Er führt entlang der Flüsse Salzach und Inn durch die österreichischen Bundesländer Salzburg und Oberösterreich. Der Name des Radwegs bezieht sich auf die alpine Bergkette der Hohen Tauern, entlang deren Nordseite der Weg im ersten Teil
GO

On the overview, tap onto a POI, or group of POI then info button to see its details.

11:23
POI Details
Burghausen In ...
89.57 km
Burghausen In Burghausen befindet sich die längste Burg der Welt, die sich über 1.051m über eine schmale Bergzunge zieht. Und auch die denkmalgeschützte
GO
11:26
POI Details
Salzwelten Hal...
121.06 km
Salzwelten Hallein Die Salzwelten Hallein sind ein Schaubergwerk des früheren Salzbergwerkes. Im Halleiner Bergwerk wurde bereits vor rund 2500 Jahren von den Kelten Salz abgebaut. Besonderheiten in diesem Bergwerk sind zwei lange Bergmannsrutschen, eine Fahrt mit der Grubenbahn, eine unterirdische Floßfahrt auf einem Salzsee und ein als „Keltendorf" bezeichnetes, kleines Freilichtmuseum übertage.
GO
TEASI Tour POIs in track (second screen contains only description)

To preview a POI on map, press the map icon.

Map preview of Teasi Tour POI

On the tour overview, Select left or right arrow (and) to see additional details of the track.

3.2.3.3. Imported POIs

Imported POIs contains the POI categories that weren't already on this device but created elsewhere and imported via computer.

To import POIs:

1. Connect the Teasi device to a computer.
2. Create a folder on the device inside the BikeNav folder called "ImportedPOIs", if not already existing.
3. All imported POIs must be placed here (**"BikeNav\ImportedPOIs"**) to be able to see them on the Teasi device.

The import started successfully when the following screen appears on next startup:

Importing POIs

When you have imported POIs, these will be shown inside this area.

Imported POI categories

Tapping on , edits the selected Category's icon.

On the bottom of the screen you can choose the sorting method by alphabet ( ), reverse alphabet ( ), or by distance ( ) (this way the closest POI will be on top).

You can browse the list via the up and down arrows that are only available if the list contains at least 9 items.

3.2.4. Statistics

Statistics is the tool that shows you a summary of your activity.

Statistics screen

Statistics can summarize all user related data based on profiles, time, and only on-track (recorded tours), or off-track data included (all information since first power up / last reset).

By default, the device shows the totals of recorded track on all profiles.
These settings can be changed in 3 different ways:

- Tapping on the Profile button ( ) each profile can be selected for examination, or “All” covers every value of each profile aggregated.

- Tapping on the calendar () different time intervals can be chosen (Totals / Year / Month / Week / Day). When a time interval is selected, it will be shown on the top of the screen.

Tapping on this field results a date selector window, where the needed date can be selected.

You can increase with plus, decrease with minus sign. Accept the changes with tick sign, cancel with ‘X’.
The upper text matches the unit of the selected time interval (for example 1/2014 gives the first week of 2014), and the lower one tells the exact interval.

- Tapping on the data source selector ( ), two different sources can be selected:

Statistics type of data

- Recorded track data shows the aggregated values of the recorded tracks on the device
- All data informs about all collected data since the device was first powered on / was reset.

Select by tapping on the radio button next to the desired option.

Changing between different screens with different fields can be done by tapping on the arrow to the left or to the right.

Values can be reset by the reset button – ( ).

Affects only TEASI ONE

3.3. Fitness

Fitness option allows you to set a route based on some parameter you would like to put the emphasis on. These parameters can be divided into two sections. You can set for how long do you want to train, or you can set the intensity of your training. Two different parameters can be chosen, giving flexible and customizable interface for best user experience. The guidelines of the training will be set based on the two parameters set manually. To change the initial numbers on a parameter, tap on it, and set the

desired value. The other parameters will change correspondingly. For example setting a higher Speed will result in lower Pace, and higher Distance, and Calories values.

Fitness by Distance, Time, Speed, Pace, and Calories

Calories can also be set by selecting an item from a list of foods and beverages. Tapping on 'Calories' makes the list to appear.

List of food and beverages

Tap on an item to select its Calorie content as a target value for your Fitness training.

When the values are set, three different methods can be selected for training. Pressing 'Go' starts the training without any additional navigation. The route of the training depends only on the user.
You can also plan a route with the given parameters, by selecting the "Plan route" option.

Note: Fitness mode also starts a recording to store the progress of the user.

Parameters based on how long should the training last are Distance, Time, and Calories.

Training by Distance

Training by Time

Training by Calories

On these screens the upper half of the screen is responsible for displaying the remaining units from the training, with visual aids indicating the estimated progress of the workout.

For example, on “Remaining Distance” screen the orange part indicates the progress already made, and the white part shows the distance still to be covered.
On “Remaining Time” screen, the upper orange part shows the remaining part, and on the “Remaining Calories” screen, the orange part shows the calories still to be burned.

Placed lower on the screen are the computers. Tap on a computer to access the list of the available tour computers to customize the training screens to be as informative as it gets.

Parameters based on how intense should the training be are Speed, and Pace.

Training by Speed

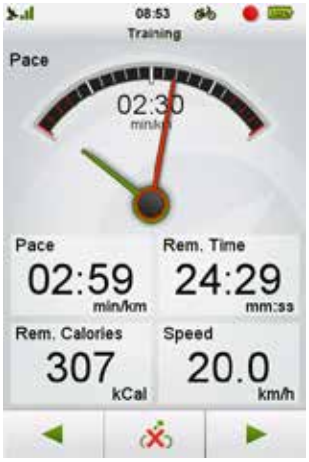

Training by Pace

The upper half of these screens shows the current intensity of your training. Speed and Pace screens also show the average speed/pace on the short hand, so it can be easily compared to the current values indicated by the long hand. The computer tours on the lower half on the screen are also changeable by tapping on them.

Affects only TEASI VOLT & Affects only TEASI ONE³

3.4. Fitness (with HR)

Fitness option allows you to set a route based on some parameter you would like to put the emphasis on. These parameters can be divided into two sections. You can set for how long do you want to train, or you can set the intensity of your training. Two different parameters can be chosen, giving flexible and customizable interface for best user experience. The guidelines of the training will be set based on the two parameters set manually. To change the initial numbers on a parameter, tap on it, and set the desired value. The other parameters will change correspondingly. For example setting a higher Speed will result in lower Pace, and higher Distance, and Calories values.

Fitness by Distance, Time, Speed, Pace, and Calories

Calories can also be set by selecting an item from a list of foods and beverages. Tapping on 'Calories' makes the list to appear.

List of food and beverages with custom option

Tap on an item to select its Calorie content as a target value for your Fitness training.

Additionally, “Custom” values can be set. Tap “Custom”and instert the desired calories to be burnt in kCal.

When the values are set, three different methods can be selected for training. Pressing ‘Go’ starts the training without any additional navigation. The route of the training depends only on the user.
You can also plan a route with the given parameters, by selecting the “Plan route” option.

Note: Fitness mode also starts a recording to store the progress of the user.

Parameters based on how long should the training last are Distance, Time, and Calories.

Training by Distance

Training by Time

Training by Calories

On these screens the upper half of the screen is responsible for displaying the remaining units from the training, with visual aids indicating the estimated progress of the workout.

For example, on “Remaining Distance” screen the orange part indicates the progress already made, and the white part shows the distance still to be covered.
On “Remaining Time” screen, the upper orange part shows the remaining part, and on the “Remaining Calories” screen, the orange part shows the calories still to be burned.

Placed lower on the screen are the computers. Tap on a computer to access the list of the available tour computers to customize the training screens to be as informative as it gets.

Parameters based on how intense should the training be are Speed, and Pace.

Training by Speed

Training by Pace

Training by HR Zone

The upper half of these screens shows the current intensity of your training. Speed and Pace screens also show the average speed/pace on the short hand, so it can be easily compared to the current values indicated by the long hand.
On the HR Zone screen the Heart Rate Monitor is shown with the previously recorded data. The computer tours on the lower half on the screen are also changeable by tapping on them.
The fitness computers on the lower half on the screen are also changeable by tapping on them.

3.4.1. *Fitness based on HR Zones*

Fitness HR Zones

5 different zones are available for settings different intensity.

Zones are based on Resting and Maximum Heart Rate. These values can be set by tapping “Personal Settings”, or in Settings → Accounts → Heart Rate Settings.

The following table gives a short insight about the 5 different zones.

Mode	Intensity	HR Zone*	Description
1	Very Light	75-80% of Max HR	Easy and comfortable
2	Light	80-85% of Max HR	Burn more calories
3	Moderate	85-90% of Max HR	Training for endurance
4	Hard	90-95% of Max HR	Very intense exercise
5	Maximum	95-100% of Max HR	Only use for short bursts

**Based on Resting HR is half of Maximum HR*

For setting up the ideal Resting and Maximum Heart Rates by Age, please refer to the following table.

Age	Resting HR Zone 50-85%	Average Maximum HR, 100%
20 years	100-170 BPM	200 BPM
30 years	95-162 BPM	190 BPM
35 years	93-157 BPM	185 BPM
40 years	90-153 BPM	180 BPM
45 years	88-149 BPM	175 BPM
50 years	85-145 BPM	170 BPM
55 years	83-140 BPM	165 BPM
60 years	80-136 BPM	160 BPM
65 years	78-132 BPM	155 BPM
70 years	75-128 BPM	150 BPM

http://www.heart.org/

Affects only TEASI PRO

3.5. Training

Training option allows you to set a route based on some parameter you would like to put the emphasis on. These parameters can be divided into two sections. You can set for how long do you want to train, or you can set the intensity of your training. Two different parameters can be chosen, giving flexible and customizable interface for best user experience. The guidelines of the training will be set based on the two parameters set manually. To change the initial numbers on a parameter, tap on it, and set the desired value. The other parameters will change correspondingly. For example setting a higher Speed will result in lower Pace, and higher Distance, and Calories values.

Training can be set by Distance, Time, Calorie, Speed, Pace, or Heart Rate Zone

When the values are set, three different methods can be selected for training.

Pressing 'Go' starts the training without any additional navigation. The route of the training depends only on the user.

You can also plan a route with the given parameters, by selecting the "Plan route" option.

Additionally, pressing the right button on the bottom of the screen ( ) makes "My Tours" available, so the trainings can be routed to a previously recorded, or imported track. Tap on a track to route the training based.

To race track select the 'Race' icon ( ), to simply train tap 'Map' icon, and then 'Go'.

Parameters based on how long should the training last are Distance, Time, and Calories.

Training by Distance

Training by Time

Training by Calories

On these screens the upper half of the screen is responsible for displaying the remaining units from the training, with visual aids indicating the estimated progress of the workout. Placed lower on the screen are the computers. Tap on a computer to access the list of the available tour computers to customize the training screens to be as informative as it gets.

Parameters based on **how intense** should the training be are **Speed, Pace,** and **Heart Rate Zone.**

Training by Speed *Training by Pace* *Training by HR Zone*

The upper half of these screens shows the current **intensity** of your training. Speed and Pace screens also show the average speed/pace on the short hand, so it can be easily compared to the current values indicated by the long hand.

The fitness computers on the lower half on the screen are also changeable by tapping on them.
On the HR Zone screen the Heart Rate Monitor is shown with the previously recorded data.

3.5.1. *Heart Rate Zones*

When Heart Rate training is selected, the lower and upper values on the graph are presented as minimum and maximum recommended values for selected training intensity.

Training intensity based on Heart Rate can be changed by tapping the “HR Zone” button when setting up training.

3.5.2. *Training via Heart Rate Zones*

Training HR Zones

5 different zones are available for settings different intensity.

Zones are based on Resting and Maximum Heart Rate. These values can be set by tapping "Personal Settings", or in Settings → Accounts → Heart Rate Settings.

The following table gives a short insight about the 5 different zones.

Mode	Intensity	HR Zone*	Description
1	Healthy	75-80% of Max HR	Easy and comfortable
2	Fitness	80-85% of Max HR	Burn more calories
3	Aerobic	85-90% of Max HR	Training for endurance
4	Anaerobic	90-95% of Max HR	Very intense exercise
5	Red Line	95-100% of Max HR	Only use for short bursts

**Based on Resting HR is half of Maximum HR*

For setting up the ideal Resting and Maximum Heart Rates by Age, please refer to the following table.

Age	Resting HR Zone 50-85%	Average Maximum HR, 100%
20 years	100-170 BPM	200 BPM
30 years	95-162 BPM	190 BPM
35 years	93-157 BPM	185 BPM
40 years	90-153 BPM	180 BPM
45 years	88-149 BPM	175 BPM
50 years	85-145 BPM	170 BPM
55 years	83-140 BPM	165 BPM
60 years	80-136 BPM	160 BPM
65 years	78-132 BPM	155 BPM
70 years	75-128 BPM	150 BPM

http://www.heart.org/

3.5.3. *Race Training*

It is also possible to start race on a previously recorded training. This way a 'ghost racer' will be shown during navigation, displaying the progress from the previous recording. The actual difference is shown in time and in distance also.

Race training

To reach race training function select a track from track list in training. Press the right button on the bottom of the screen ( ), select a track, then tap on 'Race' ( ). After the race started, the device will guide through the recorded track, showing the position compared to the opponent. At the end of the race, the results are shown.

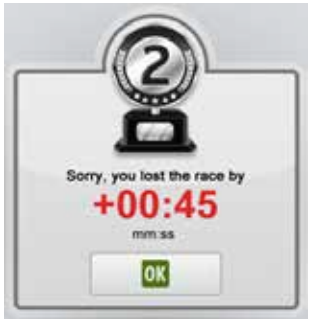

Race results

Affects all models

3.6. Destination

Destination menu is implemented in a complex, yet simply understandable way to make finding any particular address or location in an easy way.

Search Destination

3.6.1. Address

Address search is to find a location by its postal address.

You can specify each detail to find the location you are looking for.

New address selection has a simple method:

First, **Country** has to be chosen. Tap on the button to change, and browse the available countries with the up/down arrows (and).

Next step: select **City/Postal code**.

Enter City in Address Search

By tapping the field under the city/postal code the virtual ABC keyboard will appear. You can start typing the city you are looking for, and only the possible next characters will be available on the keyboard, thanks to the predictive input engine.

Enter City via keyboard in Address Search

In the text field on the right you can find a number in brackets that shows the number of the available cities that match the entered characters. If the number is fewer than 500, the list button appears, and by clicking on it the list of available cities is shown.

You can move up and down in the list with the up and down icons (and) if there is more than 8 cities in the list.

If less than 8 items are left, the list pops up automatically.

You can also select the city by postal code.

Whenever you need to enter a digit instead of a character, you can switch to the numerical keypad by pressing the “123” keyboard button.

Tap in the list the selected City.

Next step: select **Street**.

Enter Street in Address Search

By tapping the field under the street the ABC keyboard will appear. You can start typing the street you are looking for, and only the possible next characters will be available on the keyboard, thanks to the predictive input engine.

Enter Street via keyboard in Address Search

In the text field on the right you can find a number in brackets that shows the number of the available streets that match the entered characters. If the number is fewer than 500, the list button appears, and by clicking on it the list of available streets is shown.

Note: Some small cities have only their City Center available, thus not containing any street information. In these cases the City Center of the city will be used as the destination point.

You can move up and down in the list with the up and down icons (and) if there are more than 8 streets in the list.

If less than 8 items are left, the list pops up automatically.

Tap in the list the selected Street.

Next and final step is the **house number**.

Enter house number in Address Search

When tapping on the house number field the virtual numeric keypad activates.

On this keypad you can enter the house number you are looking for.

If the house number is not valid, the device will ask whether it should target the center of the street itself.

Note: You don't need to enter all the details. Without house number the center of the street will be used, and without given street name, then the center of the city will be used (the latter may not work in smaller cities).

Affects only TEASI ONE & Affects only TEASI ONE^3 & **Affects only TEASI PRO**

After the address is selected, "Start navigation" screen will appear.

Destination details

On the upper side of the screen the selected address and the distance is calculated. Until the distance is calculated the beeline distance is displayed.

A graph with the altitude outline will be shown after calculation.

Note: Teasi is able to calculate routes that are far not more than 300 km (beeline) from your current position. If the beeline distance is above 300 km, then you will be warned.

Teasi application proposes three alternative routes.

Alternative route selector

The "Suggested" path gives the best combination of roads, paying attention to optimize the type of roads (based on user profile), hardness and length of the route.

The "Easiest" option calculates the route to meet the least difficulties on the road, avoiding too sharp altitude changes, for example.

The “Shortest” option will take the user to the destination using the shortest available path, regardless of the difficulty of the route.

Affects only TEASI VOLT

When the desired address is selected, a Destination – GO screen is displayed with preliminary route information and Current Assist Level – the base of this calculation. When Current Assist Level is changed, the new calculated route is shown with the changed assist level.

Navigation plan with Current Assist Level and ECO mode

A coloured line under the altitude graph will display the battery charge evolution during the course of the navigation.

When Destination cannot be reached with current battery level, the unreachable part of the elevation graph will be shown in red, with an empty battery icon as indication.

If you still press ‘Go’ then you will be warned you might have problems to reach your destination:

Battery level is not enough to reach destination

Selecting ‘Yes’ will start navigation, and selecting ‘No’ will make new destination selection available.

On the upper side of the screen the selected address and the distance is calculated. Until the distance is calculated the beeline distance is displayed.
A graph with the altitude outline will be shown after calculation.

Note: Teasi is able to calculate routes that are far not more than 300 km (beeline) from your current position. If the beeline distance is above 300 km, then you will be warned.

Teasi application proposes three alternative routes.

The “Suggested” path gives the best combination of roads, paying attention to optimize the type of roads (based on user profile), hardness and length of the route.

“ECO mode” calculates routes that use the least amount of energy, this way making the e-bike last for the longest possible.

The “Shortest” option will take the user to the destination using the shortest available path, regardless of the difficulty of the route.

Affects all models

By tapping on one of the three possibilities, the device will show the route that belongs to that option. When on the Details screen, the Altitude profile will be shown, and on Map Preview the map of the calculated route itself is available.

At the bottom of this screen there are 3 buttons.

By tapping the “Star” button (), the address is added to favorites.

By tapping the “Go” button ( ) navigation starts immediately.

By selecting the map icon ( ) the map will show with the preview of the calculated route.

If you are in preview mode you can see a colored preview of the calculated route. Also on this screen it is possible to choose an alternative route.

If you want to start navigation, just press the “Go” ( ) button.
If you want to get back to the previous screen, press the back button.

A list of the previous address searches can be reached by tapping on the recent addresses button on the bottom of the screen.

Recent Addresses

If there are more than 8 addresses, you can go through them by the up/down buttons (and).

A star ( ) means that the address has been saved as a favorite too.

You can sort the list with the "A->Z" button (A-Z).

The ordering options are: from A to Z (A-Z), from Z to A (Z-A), or Time ( ) (most recent searches on the top).

With the bin icon the recent addresses can be cleared after a prompt question.

3.6.2. Extended POI Search

You can also search for **POIs**, by tapping the POI icon inside the Search menu. Extended POI search further expands the capabilities of regular POI searching, by giving new base locations for POI search.

You can search by Name, by Type, or you can browse the recent POI searches with "Near..." search location can be set

When “Near…” is pressed, the base options for searching are presented

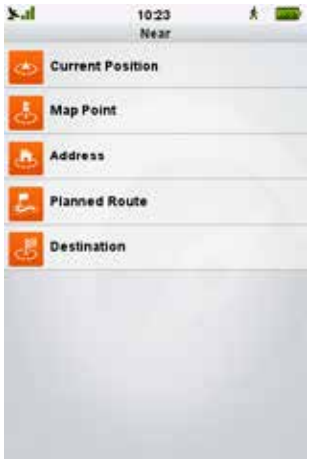

“Near…” categories

“Near…” categories are: Current Position, Map Point, Address, *Planned Route, and Destination*

Note: Planned Route and Destination are only present if currently available!

Use “Current Position” for default POI search – using actual location as a base.

Map Point and Address search “Near…” categories work exactly the same way as in destination selection.

After “Near...” is set, POI Search should be started by selecting search mode.

You can search by Name, by Type, or you can browse the recent POI searches.

Searching by name, the name or part of it has to be inserted via the ABC keyboard. Input method is similar to what already described for Address Search.

Searching POI by Name

Searching by Type, a list will show the available categories, and the desired one should be selected.

Also Categories from Imported POIs will be listed here.

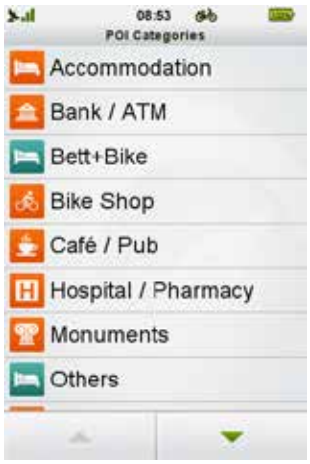

POI Search by Type

Recent searches can be ordered by alphabet (A-Z), reverse alphabet (Z-A), or by time ( ) (most recent search will be on top).

They can be also erased by the bin icon ( ).

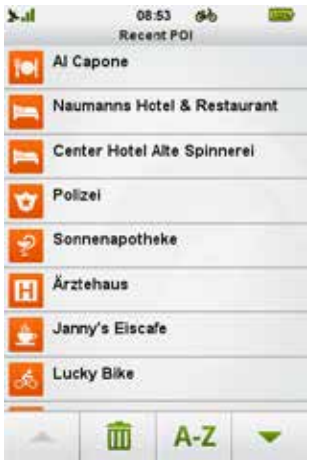

Recent POI searches

POIs are always searched around your current position and when you will get a list of the matching items, you will get the beeline distance from the POI.

When you have selected your desired item, then the “Start Navigation” screen will be displayed, as already explained inside the Address Search.

3.6.2.1. Ski POI Categories

For easier navigation in any Ski Resort, Teasi comes with additional Ski related POIs.
These categories are: Ski Lifts, Ski Schools, and Ski Shelters.

Ski-Related POI Category

Select Ski category to browse the near Ski venues.

3.6.2.2. Sea POI Categories

Several maritime POIs have been introduced to make navigation even more useful and comfortable.

Sea POIs divide into two categories:

- **Tappable:** POI details are revealed when pressed.
  - Lighthouse
  - Light objects
  - Mooring
  - Rock
  - Platform
  - Signal Station Traffic / Warning
  - Bridge
  - Wreck
  - Radio Station
  - Notice marks
  - Production Area Center

When tapped, POI details are shown:

Sea POI Details

- **Searchable:** POIs **can also be tapped,** but can also reached by Destination→Extended POI search

    - Harbour
    - Landmarks
    - Small Craft Facilities

Several detailed sea POI attributes can be displayed by tapping for details. POI attributes are based on the OpenSeaMap database.

Affects all models

3.6.3. Favorites

You can also search your **Favorites**, by selecting the Favorites icon in Search.

A list will appear with your saved locations.

Search by Favorites

Favorites can be ordered by alphabet (A-Z), reverse alphabet (Z-A), or by time ( ) (most recent search will be on top).

When you have selected your desired item, then the “Start Navigation” screen will be displayed, as already explained inside the Address Search.

3.6.4. Map Point

Search based on a **Map Point** is also available.

This option will bring up a map that can be panned and zoomed.

Search by Map Point

Tap on the map to select your target destination. A checkered flag will be displayed.

If the point is right, then just press “Go” to move to the “Start Navigation” screen, as already explained inside the Address Search.
Destination point can be replaced by tapping elsewhere on the map.

3.6.5. Coordinates

In the **Coordinates** menu you can manually insert the coordinates of your target destination.

Search by Coordinates

Enter the Latitude coordinate inside the “Latitude” field.
You can change between North and South with the “N/S” button.

Enter the Longitude coordinate to the “Longitude” field.
You can change between East and West with the “E/W” button.

Multiple coordinate formats can be inserted:

Degrees, minutes, seconds:	40° 25’ 46” N	79° 56’ 56” W
Degrees, decimal minutes:	40° 25.767’ N	79° 56.933” W
Decimal degrees:	40.256° N	76.962° W

Coordinates can be entered in one of the three formats, virtual keyboard will adapt to the format during the input.

For example, if decimal degrees are to be used, use punctuation after the degrees, and ° as closing item for the coordinate.

If you want to add the minutes or seconds instead of fraction of degrees, ’ (after minutes) and ” (after seconds) should be used.

When you have entered the coordinates, then the “Start Navigation” screen will be displayed, as already explained inside the Address Search.

3.6.6. Tours

You can also search your **Tours**, by selecting the Tours icon inside the Search menu.

A list will appear with your saved tours, both local, and imported ones.

Tours can be ordered by distance ( ) (the shortest will be on top), or by time ( ) (most recent search will be on top).

They can be also erased by the bin icon ( ).

When you have selected your desired item, then the “Start Navigation” screen will be displayed, as already explained inside the Address Search, but with some further possibilities to customize the tour.

Start Navigation to a Tour

Additional options are present, based on the tour details (location, direction), and current location:

Selecting this option allows routing from the current location to the start point of the desired track, then navigation will be continued on the tour until its end point.



This option reverts the navigation, going first to the end point of the tour, then guiding till the original start point.



This option guides the device to the closest point from current location of the selected tour, then navigates to the end.

The last option is for getting to the closest point from current location, then navigating the tour in reverse mode to the original start point of the tour.

Selection of suggested/easiest/shortest route and previewing on the map works as in all the other navigation cases.

3.6.7. Multiple Destinations

Multiple Destinations feature makes several locations available to be added to one route.

This way, navigation will route through the multiple points added as targets to be reached.
This list can be saved, edited, new points can be added, points can be moved and deleted during navigation.

Adding more than one destination can be done in several ways.

When a single destination is selected, further target locations can be added by tapping on the “add next destination button” ( ) on the bottom left of Destination – Go screen.

Destination – GO with additional Multiple Destination feature

When the “Add another destination” button is pressed, the Waypoint list is shown, with the previously set destination as first item of the list (thus the first destination to reach).

Any further destination will be added to the waypoint list, this way the list will contain all set destination in a manageable way.

Waypoint list from Destination - Go

Another destination can be added by tapping on this button:



.

This will bring up the Destination screen again. Any type of target location selected will be added to the list as next item, and routing (if there was an ongoing navigation) will now be calculated further, navigating to the new endpoint.

Note: Adding route to Multiple Destination is not supported

Currently up to 7 items can be added to Multiple Destinations. Tapping on an item will select it for manipulation in the list.

Selected destination can be moved in list or deleted from it

The selected destination can be moved up or down ,

or can be deleted from the list .

If there is no destination selected, and ‘Delete’ is pressed, the list will be emptied. If there was an ongoing navigation first it will be stopped, then list can be cleared.

Note: Already reached destinations cannot be manipulated.
When there is more than one destination point in the waypoint list, the ‘calculate route’ button is present.

Pressing this button will show the calculated route between the first and the last point.

Plan – Go screen

Note: This calculation does not include current location. This feature is to save the tracks for future use.

To save the track, just press the ‘Save’ button . The application will inform if saving is successful.

To see the route on the map before any other operation, press ‘Map Preview’ .

To use the calculated route immediately, just press ‘Go’ on this next screen again

This will give a new calculation that contains routing from current location to the first point of Multiple Destinations route.

This route can also be saved by tapping on the ‘Save’ button , can be previewed by selecting ‘Map Preview’ .

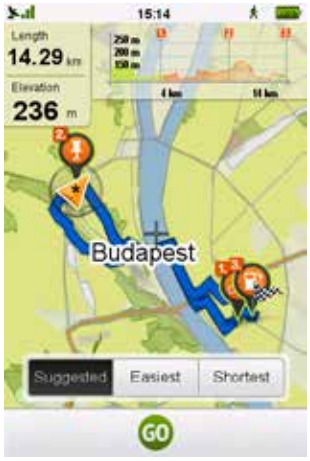

Map preview of Multiple Destination route from current location

Press ‘Go’ on either Map Preview or Multiple Destination – Go for starting the navigation.

Progress of destinations being reached will be shown on map screen on the altitude graph:

Ongoing Multiple Destination navigation

The already passed destinations will be green in the waypoint list also.

Waypoints that have their number in green have already been passed

3.6.8. Ski Destination

Route calculation in Ski mode offers the possibility to navigate onto and between pistes and ski lifts.

Ski – Destination – Go screen

Ski destination can be used with 2 different routing methods:

- **Suggested** (*default*) route will use only pistes that are available based on your route settings (min. – max. experience level)
- **Shortest** will use every piste that not exceeds the max experience level set for the current profile.

Note: Routing will only happen when correct settings are used! Not only experience level, but proper ski type has to be used.
For example: Downhill profile will not route on Ski Tour and Nordic pistes.

If route calculation is not possible, the altitude graph will be empty, and on map preview the beeline to the target point will be shown.

3.6.9. Boat Destination

Boat Navigation is happening in beeline mode.

Boat Destination – with alerts along the route #changed

In Boat Destination the alerts are also shown so limitations are known before the trip
Destinations are available custom-tailored for boat navigation:

- For POI search the Sea POIs are available.
- Instead of Address search, Point-by-point feature is available: by tapping on the map, multiple points can be selected for beeline navigation on a fine-tuned route.

Point-by-Point feature for Boat account

For Multiple Destination targets, the following categories can be used: Sea POIs, Favorites, Map Point, and Coordinates.

Affects all models

3.7. Route

Route is our unique feature to create individual tracks in real time – on your Teasi device.

You can easily create your routes with few steps:
When you select this option from the Main Menu, a map will be displayed

Plan Route

Tap on the screen to create a start point for the track (you can pan and zoom to choose the preferred location).

If you tap the screen inside the circle that identifies your current location, then the starting point will be automatically set to your current location.
Start point will be displayed on the map with a blue flag.

Tap on the map to select additional waypoints to customize your track.

If you want to make a circular route that ends on your starting point, then just taps the screen close to the blue flag and Teasi will automatically calculate a circular route.

There are additional options on the bottom of the screen:

- Last entered waypoint can be removed by the back button ( )

- The created track can be saved via the floppy button ( )

- Navigation on the planned route (or to the first point of the route, if the start point is not the same than current location) can be started with the “Go” button ( )

- Alternative routes can be generated by tapping on the alternate route button ( )

On the top of the screen an altitude graph is available to see the altitude outline during the route.

On the left you can see the length of the calculated route and the total ascent of the track. This last field is changed to “Remaining distance”, when the Route was started from inside the **Fitness** menu.

When you start the Route planning from the Fitness menu, this function has also some other characteristics: your current position will be the start point of your route, and you will see the blue flag on your GPS location.

Also, a blue circle will be displayed around the last entered waypoint to show approximately how far the route can go to fulfill the fitness requirements you set.

E-bike Computer with Gear Recommendation

3.7.1. U2U-Routing

As an addition to the routing algorithm based on the personal preferences, Teasi also uses "Heatmaps" (powered by Bikemap), which collect the biking traces of millions of kilometers from real users. This way, our routing algorithm is also tuned by the users themselves, preferring the paths that are often travelled by majority of cyclists.

3.8. Computer

Affects only TEASI VOLT

3.8.1. E-bike Computer with Gear Recommendation

Teasi Volt comes with a special computer screen that contains the most valuable information for E-bike: Battery, Range, Engine Power, Assist level, and Current Speed of E-bike.
The centerpiece of the screen is an interchangeable element that can display battery in percentage or range in distance.

E-bike computer screen with switchable Battery/Range feature

E-bike Computer screen also shows the power input from E-bike and also from user.

The arc shape on top shows the power input from 0W to 500W.
The green part of the scale is the human effort, and the orange part is the power given by the E-bike.

Tap on the centerpiece to change between range and battery display.

3.8.1.1. E-bike Light Management

On compatible bike types, Teasi can also manage the switching of the headlight on the bike on and off.

E-bike dashboard with Light Management

Pressing the button will turn on/off the light on the bicycle.

Additionally, long pressing the hardware back button on Teasi Volt will turn on/off the light on the bicycle.

3.8.1.2. Gear Recommendation

Teasi Volt also provides gear recommendation based on speed and cadence of the user.

An upwards triangle shows when to change gear up and a downwards triangle shows when to change gear down.

Please set up the Gear Settings under E-bike Account to have appropriate Gear Recommendations.

Affects all models

3.8.2. Dashboard

Computer is a configurable tool that displays useful data since the device was first powered on / was reset.
In general, two kind of data are available: the aggregated ones (max speed, all distance covered, etc.), and the momentary ones (current speed, altitude, etc.).

The aggregated values can be reset by tapping the reset button ( ).

Bike Computer with customizable data fields

Two, three or six **bike computer** screens are built inside this function, depending on the chosen layout.
Changing between them is possible with the arrows on the top of the screen.

The layout settings can also be changed by tapping on the layout button ( ).

These 12 fields can be changed by tapping on them.
You can browse the list via the up and down arrows.

By tapping on the new item, the field will change accordingly.

With the buttons at the bottom of the screen you can reach other options of this function: you can start/stop recording with the recording icon ( ), or move to the **Speedometer** and the **Compass** screen by selecting the arrow buttons.

3.8.2.1. List of Available Teasi Computers

Active Time	Time spent moving when recording
Altitude	Height of position compared to sea-level
Arrival Time	Your estimated arrival time
Average Active Speed	Your average speed based on time spent moving
Average Pace	Your average pace (time to ride one kilometer or mile)
Average Speed	Your average speed (including pauses)

Calories	Calories burnt
Climb left	Remaining uphill climb on current navigation route.
Device Battery	Battery percentage left
Distance to Destination	Distance to Destination (needs ongoing navigation)
Distance to Next Turn	Distance to Next Turn (needs ongoing navigation)
Distance to Tour	Distance to reach your loaded Tour (needs ongoing navigation to Tour)
Grade	Degree of inclination of the road
Heading	The course or direction in which the device is moving
Latitude	Your Latitude position
Length	Distance covered
Longitude	Your Longitude position
Maximum Altitude	The highest Altitude reached by the device
Maximum Pace	The maximum reached value of Pace
Maximum Speed	The maximum reached value of Speed
Pace	Current pace (time to ride one kilometer or mile)
Speed	Current speed
Sunrise	Time of Sunrise of the current day
Sunset	Time of Sunset of the current day
Time of Day	Current time
Time to Destination	Estimated time to destination (needs ongoing navigation)
Time to Next Turn	Estimated time to next turn (needs ongoing navigation)
Total Ascent	The sum of all vertical units of those parts of the track that ascent.
Total Descent	The sum of all vertical units of those parts of the track that descent.
Total Time	Time since training started.

Affects only TEASI ONE & **Affects only TEASI PRO** **& Affects only TEASI ONE³**

Downhill Ski related Computers:

Skiing Length	The length of your skiing, without considering the parts spent on lifts.
Skiing Active Time	The active time of your skiing, without considering the parts spent on lifts.
Skiing Average Speed	Your average speed based on the time spent skiing down.

Affects only TEASI PRO & Affects only TEASI ONE³

Sensor related Computers:

Cadence	The number of revolutions of the crankset per minute

Heart Rate	The number of heart beats per minute
Average Cadence	The average of recorded cadences over time.
Average Heart Rate	The average of recorded heart rates over time.
Maximum Cadence	The maximum reached number of revolutions of the crankset per minute
Maximum Heart Rate	The maximum reached number of heart beats per minute
Pressure	Air Pressure

Affects only TEASI VOLT

Sensor related Computers:

Heart Rate	The number of heart beats per minute
Average Heart Rate	The average of recorded heart rates over time.
Maximum Heart Rate	The maximum reached number of heart beats per minute

E-bike related Computers:

Assist Level	Current assist level of connected E-bike
Cadence*	The number of revolutions of the crankset per minute
Average Cadence*	The average of recorded cadences over time.
Maximum Cadence*	The maximum reached number of revolutions of the crankset per minute
Current	Actual current used by bike in mA
E-bike Battery	Current battery percentage of E-bike
Gear*	Recommended Shifting of E-bike (and Current Gear if available)
Human Power	Power applied to the bike by the biker in Watt
Motor Power	Power applied to the bike by the E-bike motor in Watt
Odometer*	All distance covered by E-bike
Remaining Battery at Destination	Estimated Remaining Battery percentage of E-bike when destination is reached
Remaining Range at Destination	Estimated Remaining Range of E-bike when destination is reached
Torque*	Force in Kilograms applied to the pedals by the biker
Voltage	Voltage of Battery in mV

**Not available for all bike models*

Affects all models

3.8.3. Speedometer

Speedometer

The **Speedometer** screen shows your current speed, scaled for the bicycle/pedestrian type that is chosen for the selected profile.

Under the speedometer, there are also two changeable computers that can be set by tapping on them.

Recording can also be started from here. Just press the record button ( ), and select 'Record' when prompted. For pausing or stopping, select the ( ) button.

3.8.4. Sun Compass

Built-in Compass

The **Compass** screen shows the direction to north, based on heading displayed on Teasi device. The compass can detect direction changes only when GPS satellites are caught and when moving.
An icon with the sun is displayed on the compass. If you know the direction of the sun when you are standing, direct the Teasi with the sun icon to the sun and you will now the direction on the compass.

Under the compass, there are also two changeable computers that can be set by tapping on them.

Recording can also be started from here. Just press the record button ( ), and select 'Record' when prompted. For pausing or stopping select the ( ) button.

Affects only TEASI PRO

3.8.4. Compass

Built-in Compass

The **Compass** screen shows the direction to north, through the built-in compass available inside the Teasi Pro device.
Under the compass, there are also two changeable computers that can be set by tapping on them.

Recording can also be started from here. Just press the record button ( ), and select 'Record' when prompted. For pausing or stopping select the ( ) button.

Recalibration can be initiated by pressing 'Recalibrate'

3.8.5. Weather Forecast

Weather Forecast

This is the tool to forecast the changes in the weather, based on the changes of the air pressure.

The upper half of the screen displays a forecast for the expected weather, based on your location and the air pressure changes.

The lower half of the screen contains a graph with the changing values of the air pressure, that were recorded by the built in barometer of the device.

Affects only TEASI ONE & Affects only TEASI PRO & Affects only TEASI ONE³

3.8.6. Tide Computer

Tide Chart in Computers

When boat mode is active, in computers there will be a tide chart shown.
This chart will show the high and low tides for current place and current time.

To change time, press the calendar icon ( ), and select a different day.

Tide Date selection

To reset the day, press the reset icon( ) on the calendar.

3.8.6.1. Selecting Reference Point

Tapping on current Tide reference point, Teasi will show Tide Location list.

Tide Reference Point Selection

When Automatic Selection is checked, Teasi will always select the closest reference point.

When Automatic Selection is not checked, every known reference point is available for use and display.
Select list item to make it first in the list, this way after “OK”, Teasi will show tide chart always for the item on the top of the list.

Affects all models

3.9. Settings

Inside the Settings menu you have the possibility to choose your preferred configuration to live the best experience with your Teasi device.

3.9.1. Maps & Clean Up Maps

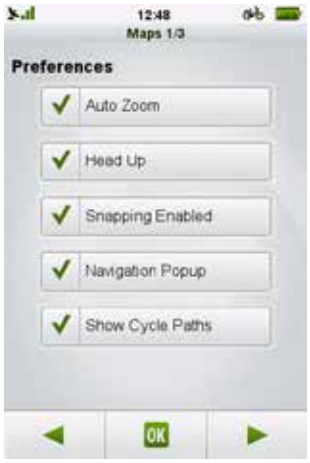

Map settings

In **Maps**, three pages of features can be fine-tuned for efficient optimization.

The first page contains settings regarding zoom, and orientation.

The **“**Auto Zoom” can be turned on or off, thus enabling automatic zoom.

Orientation can also be decided: Checking “Head up” allows the device to always turn the map to the heading, while unchecking it keeps the map with north on the top of the screen.

When snapping is enabled, the cursor will be snapped to the track in the event of navigation on a track. This way the noise of the signal is reduced on the GUI so progress can be seen in a more demonstrative way.

Note: The recording itself would contain the original signals, so the movement of the location cursor and the red line of recording might differ.

To see the unfiltered position, disable the snapping feature. Navigational pop-up informs about next turn when map screen is not visible.

Navigation Popup

To disable these pop-ups, uncheck the option in the menu.

On the second page of map settings are placed the settings of displaying favorites and POIs.

The display of each item can be set by its individual “Show on map” button (

).

For Map, and Imported POIs the shown categories are also selectable by the “Select Categories” button (

).

When an ‘X’ ( ) is shown next to a category, it will not be displayed on map.

Third and last page contains Clean up Maps, and Raster map feature.

Clean Up Maps is a feature to delete maps on the device, making free space for any needs on the go.

Clean Up Maps

Under the status bar, on the top of the screen is the free space presented both on device and memory card.
Under the free space indicator you can find a list of installed countries. Select the countries to be deleted by tapping them once. If the bin is enabled on the bottom of the screen, the countries marked by 'X' ( ) will be deleted after a prompt question in a pop-up box. Select yes on the box to confirm deletion.

At least one country has to be present, therefore it will not be possible to remove all the countries.

Raster maps can be used by checking the "Use Raster Maps" checkbox, and by selecting valid sources. Open "Select Sources", and select a raster map to be used (selected maps are dark gray).

Pan on map screen to the affected area to see the difference made by the feature.

Note: Raster maps on SD card will be loaded on Software startup. If SD is inserted, but raster maps are not visible, please restart the device!

Supported Raster Map format is MBTiles.
Quality raster maps are provided by KOMPASS, and MagicMaps.

For creating own raster maps, please visit:
http://www.teasi.eu/fileadmin/redaktion/mbtiles/Teasi-Tech-Tipp-MOBAC_EN.pdf

Affects only TEASI ONE & **Affects only TEASI VOLT & Affects only TEASI ONE^3**

3.9.2. System & Easy Mode – Full mode

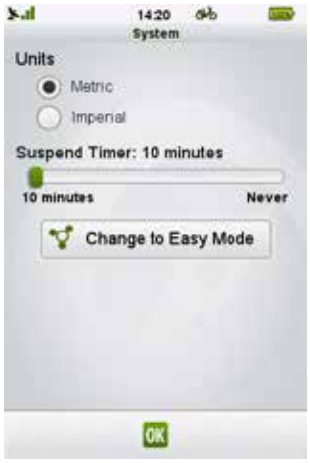

System settings

In System the units can be changed. Tap on 'Metric', to use metric system, and tap on 'Imperial', to use the imperial.

The timer for Suspend mode can also be set here: tap on the slider, and move it to the desired value, then press OK ( ) button to accept the changes.

Affects only TEASI ONE & Affects only TEASI PRO & Affects only TEASI ONE³

Note: If Units settings are disabled, Nautical settings are in use. To disable nautical settings, and enable Metric / imperial, go to Account Settings.

3.9.1.1. Easy mode - Full mode

Easy Mode of Teasi One

Easy mode contains only the essential features: Map, Destination, Memory, and Settings (where full mode can be set).

Easy mode can be selected by “Change to Easy Mode” when device is set to Full Mode, and Full mode can be set by tapping “Change to Full Mode” when device is set to Easy mode.

Full mode contains all features of the Teasi One device.

Affects only TEASI PRO

3.9.2. System & Full menu – Custom menu

System settings

In System the units can be selected. Tap on the circle next to the desired unit system

Note: If Units settings are disabled, nautical settings are in use. To disable Nautical settings, and enable Metric / Imperial, go to Account Settings.

The timer for Suspend mode can also be set here: tap on the slider, and move it to the desired value, then press OK ( ) button to accept the changes.

The function button can also be set from here by tapping ( ).

When function button is pressed, the order set in Function Button Setup will be rotated on every press.

List of order of function button features.

Tap on an item to execute a task on it:

Move up: Move down: Unselect: .

Unselected functions can be re-selected by tapping on .

3.9.2.1. Full Menu – Custom Menu

In System settings, you can change between Full menu, and Custom menu. Full menu contains all available features on the device, and Custom menu can be set to only show the essentials, thus gaining speed and comfort in everyday use of the device. Select “Enable Custom Menu” by ticking it, then tap on “Select Menu Items”.

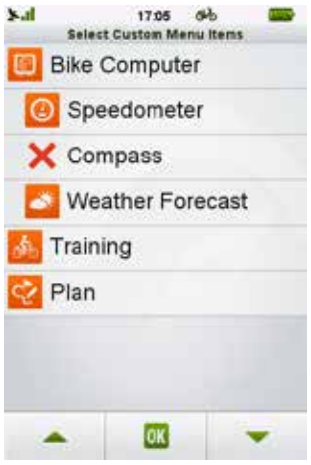

Selection of Custom Menu Items

By default, Custom mode contains all available features.

Tap on a menu item to select / unselect it. If a red ‘X’ is shown next to a feature, then it will be hidden in the Main Menu.

Affects all models

3.9.3. Accounts

Account settings

In **Accounts** you are able to create up to 8 user profiles. Existing profiles can also be edited or removed.

Affects only TEASI ONE & **Affects only TEASI VOLT & Affects only TEASI ONE³**

Note: When easy mode is selected, new profiles cannot be added, and existing profiles cannot be deleted.

If Create and Edit options are not enabled in “Accounts”, **Normal mode** should be reactivated in Settings → System → “Change to normal mode”.

Affects all models

To **create** a profile (only if less than 8 profiles exist):

1. Tap on the plus sign (+)
2. Tap on the details you want to change from the default values
3. Tap on OK (OK) when finished.

To **edit** a profile:

1. Tap on the profile

2. Select the Pen button to edit profile ( )
3. Tap on the details you want to change
4. Tap on OK ( ) when finished.

To **activate** a profile:

1. Tap on the profile
2. Select OK ( ) to close the screen.

To **delete** a profile:

1. Tap on the profile
2. Select the Pen button to edit profile ( )
3. Tap on the bin icon to delete ( )
4. Select “Yes” in the upcoming confirmation query.

For each profile you can set a Name, Weight, Bike Weight, bicycle/pedestrian type, by tapping on each field.

Editing Profile Entry

Pressing arrow buttons, you can define other parameters for your account, like the road preferences you would like to be used when a route is calculated.
Also, further, more advanced routing settings can be done in the last page of this menu, on “Advanced Route settings”:

Advanced Route Settings

In Advanced Route Settings the navigation mode can be selected – Turn By Turn, or Beeline. Turn by turn gives the normal navigation where every turn is instructed, and beeline shows the direction straight to the destination.
Also, one-way streets can be used by bicycle. For this, select “Both ways”.

Affects only TEASI VOLT

3.9.3.1. Bike Pairing and Configuration

Pairing E-bike to an account happens under Settings → Accounts.

When E-bike is connected, and pairing is not happened yet, pairing can be started by pressing the following button: Pair

E-bike configuration can be done under Accounts → Bike Configuration.
In this menu gear and speed sensor settings of the E-bike can be calibrated.

E-*bike configuration*

In this screen Bike Weight can be set, and gear settings can be configured. Derailleur and hub gears are both available. If using e-bike with derailleur, select “Derailleur”. If using e-bike with hub gear (such as Shimano Nexus 7 and 8), select “Hub”.

When Derailleur settings are in use,

Derailleur type can be changed by tapping

.

This will show the available Derailleur types (based on the number of rear casettes).

Derailleur type selection

Selecting a type will set the rear casette settings described under the list element.

Casette teeth numbers can also be adjusted one by one by tapping

When rear casette settings are modified, the Derailleur type will be set to „Custom”.

When Hub settings are in use,

Hub type can be changed by tapping

.

This will show the available Hub types (based on the number of gears).

Hub type selection

Selecting a type will set the hub settings described under the list element.

Gear ratios can also be adjusted one by one by tapping
Hub Settings.
When hub settings are modified, the Derailleur type will be set to „Custom”.

In cases of both types (Hub and Derailleur), also the front casette number, and the individual teeth number for casettes can be set by tapping
Front Cassette Settings.

When there are multiple front casettes (available only with derailleur, the casettes should be configured so that the smallest teeth number comes as first, the biggest comes last.

Setting the teeth numbers for Front Casettes

3.9.3.1.1. Additional Bike settings

Wheel settings for Speed sensor can also be set in „Bike Configuration”.

Bike configuration - Wheel settings

For setting up Rim and Wheel circumference, please see to Setting Wheel Size.

Auto-detection of the wheel circumference is also possible by checking the „Auto-detect" option.
This will use the wheel rotation and GPS data to set the correct wheel circumference.
When „auto-detect" is checked, movement with valid GPS signal is necessary for Teasi to auto-detect the wheel size.

Invert Assist level controller should be checked when bike assist level does not function correctly (up button shifts down, down button shifts up). When checked, controls will be inverted, so up will change assist level to a higher value, while down button will decrease the assist level.

Note: „Wheel circumference auto detection" and „Invert Assist level" are not available with all E-bike types.

Affects only TEASI PRO & **Affects only TEASI VOLT & Affects only TEASI ONE³**

3.9.3.2. Heart Rate Settings

In Accounts can also be found the settings screen for heart rate related options.
In this screen the recommended maximum and resting heart rate is set based on user age and gender.
These heart rate values can also be changed by tapping on them and inserting the desired numbers manually.

Affects only TEASI VOLT

These set heart rate values will be the base for “Assist level suggestion based on Heart Rate” feature.

Affects only TEASI ONE & **Affects only TEASI VOLT & Affects only TEASI ONE³**

3.9.3.3. Accounts in Easy Mode

When easy mode is selected, new profiles cannot be added, and existing profiles cannot be deleted.

Easy Mode

Profile settings can still be edited

Affects only TEASI ONE & Affects only TEASI PRO & Affects only TEASI ONE³

3.9.3.4. Ski Account

Teasi supports creating Ski accounts. This account type enables the features for skiers, such as displaying and routing on pistes, ski lifts, ski-related POI.

Record your runs, set up a meeting point, route to it!

Ski runs and ski performances are measured and can be read later on.

When the Ski account is selected, the device displays ski pistes, ski lifts, and all ski-related POIs such as Ski Schools and Ski Rentals.

Device will use these ski pistes and lifts for routing, so every skier is able to navigate on the pistes, and record his exact runs.

For activating Ski features, select an account where type “Ski” is set, or create a new account with the type set to “Ski”.

Ski account for Skiing activities

If the Ski account is not yet configured, then you will be asked to make proper configuration for it.

“Set up Ski account now?”

If “No” is selected, the default parameters will be used (Downhill with Novice-Easy pistes).

If ‘Yes’ is selected, the Route Options are shown for ski account settings: on this page the route settings such as experience level and type of ski can be set.

Route Settings for Ski account

Here you can select the type of the skiing:

- Downhill
- Nordic
- Ski Tour

Experience level can be set, so that you will be routed only on the preferred types of pistes.

- Novice → Green slopes allowed
- Easy → Blue slopes allowed
- Intermediate → Red slopes allowed
- Advanced → Black slopes allowed
- Extreme -> Extreme (yellow and expert) slopes are allowed

For example:

- If the user sets the minimum experience level to “Easy” and the maximum to “Advanced”, then only blue, red and black pistes will be considered.
- If the user sets both levels to “Intermediate”, then only red pistes will be considered.

Not only pistes, but ski lifts can be taken out of routing (for example ski lift is not working currently because of weather issues / seasonal reasons).

For this, POI details of a Ski lift should be opened, and “Use in route planning” should be unchecked.

Ski lift POI

On map screen the POI will change when disabled:

Ski lift enabled: Ski lift disabled: .

Every day after first startup from power off / suspend, if there were disabled ski lifts present, the device whether Ski Lifts should be re-enabled:

Popup for Disabled Ski Lifts

If “Yes” is selected, every disabled ski lift is enabled again.
If “No” is selected, the previous settings are kept.
Enabling Ski Lifts again can be done from “Route Options” menu also.

Route Settings

"Enable Ski Lifts" button is enabled, when there is at least 1 disabled ski lift. After pressing "Enable Ski Lifts" select "Yes" to re-enable all Ski lifts. Pressing "No" closes the pop-up with previous settings kept.

3.9.3.5. Boat Account

When Boat type is selected, boat settings are displayed.

Under "Type" the nautical units settings will appear: during boat mode, this setting will overwrite the settings in "Units". To use nautical units, check this box, to keep previous settings, keep this box unchecked.

Another screen also becomes available – Boat Settings.

Here boat type can be set: Sailboat / Motorboat / Rowing boat / Canoe / Kayak

For Sailboat and Motorboat Length, Width, Height, and Draft can be set.

For manual boats instead of Draft, Weight can be set for Calorie calculation purposes.

Dimensions of boat are used for alerting the user when projected position indicates any danger based on these physical attributes of the boat (for example low bridges, narrow port entrances).

These alerts are based on the OpenSeaMap database.

3.9.4. Sensors

Affects only TEASI VOLT & **Affects only TEASI one3**

Sensors Speed and Cadence and Heart Rate Sensor #changed

In Teasi the Bluetooth sensor can be turned on in settings, by tapping Speed/Cadence or Heart Rate sensor buttons.

When BLE is turned off, and sensor buttons are tapped, Teasi will ask if BLE should be turned on.

Enable BLE popup

When BLE is turned on, it will be shown on the sensor icons.

BLE is turned on

Bluetooth can be turned off in the power menu, by pressing the “Bluetooth off”

Bluetooth off

from the power menu by long pressing the lower button on the side of the device.

Power menu

Affects only TEASI PRO

Sensors settings #changed

The sensors setting screen covers all possible hardware sensor related features. When BLE is turned off, and sensor buttons are tapped, Teasi will ask if BLE should be turned on.

Enable BLE popup

When BLE is turned on, it will be shown on the sensor icons.

BLE is turned on

Bluetooth can be turned off in the power menu, by pressing the “Bluetooth off”

Bluetooth off

from the power menu by long pressing the lower button on the side of the device.

Power menu

3.8.3.5. Compass

Compass Screen

The compass screen shows the built in compass of the device. Recalibration is also possible by pressing the ‘Start’ button under ‘Calibration’.

Compass calibration screen

When compass calibration is started, sweep the device through a figure 8 pattern to calibrate the compass. During sweep, also rotate the device so its screen is faced to the center of the movement. The device signals, if the calibration was successful or not.

Note: The compass calibration might not succeed at the first attempt. Please, try to repeat the operation whenever you have the impression that the compass is not orientated correctly.

3.8.3.6. Barometer

Barometer calibration

The built-in Barometer sensor is used to provide you information about the altitude variations during your activity.
This sensor needs to be calibrated, setting an initial altitude value that might come from the GPS or it can be set manually, if you know the exact altitude of the place where you are.
When the sensor is calibrated, 'Calibrated' text will notify you. Recalibration can be achieved by pressing the 'Reset button'.

Note: Any change to the weather means a change to the air pressure, which can lead to a change to the current altitude. The reference value in the barometer settings is used every time the user switches the Teasi on, which means the barometer must be recalibrated every time after Teasi has been turned off then on, or position has been changed.

If you want to enter the altitude manually, select 'Manual', then press the height button (default: '0m'), and insert the desired value.

Affects only TEASI PRO & **Affects only TEASI VOLT** & **Affects only TEASI ONE³**

3.8.3.7. Heart Rate Sensor Settings

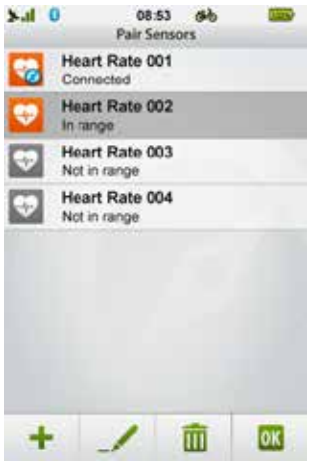

Heart Rate Sensor settings

Tapping on 'Heart Rate' in Settings will show a list with the previously paired sensors.

Note: if Bluetooth or Heart Rate category sensors were disabled, the device will notify the user and prompt if settings should be changed for an enabled Bluetooth and sensor feature.

This list is grouped and ordered based on the range of the sensor, and its last known connection date.
The first item would be a connected and present sensor. If there is no connected sensor, the sensors in range will be shown, and under them the sensors that are paired with the device, but are not in range.
These list items will be further ordered by the date of last connection, so the latest sensor will be found at the top.

If there are not any paired sensors yet, new ones can be connected by tapping the plus sign on the bottom of the screen.

After tapping the plus sign, the available sensors in range will be shown.

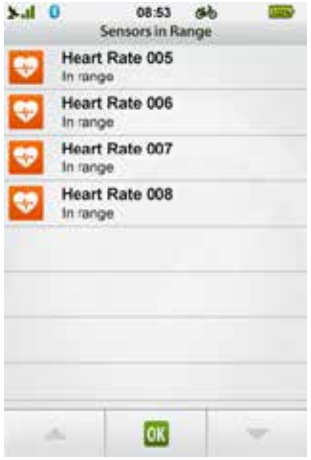

List of sensors in range

Note: a sensor that is not in range during the attempt, will not be shown in the list, thus pairing won't be available.

In HR settings, the icon next to the sensors name is to indicate the status of the connection to the sensor.

Tap on a sensor, then select 'OK' ( ) from the popup dialog to connect, and select 'No', to just select it.

Tap on a sensor, then select bin icon ( ) to forget the sensor.

Sensors can be renamed by tapping on the sensor, then tapping on the edit button ( ).

Edit name of sensor

Affects only TEASI PRO & Affects only TEASI ONE^3 & Affects only TEASI Volt

3.8.3.8. Speed and Cadence (SAC) sensor Settings

SAC Sensor settings

Tapping on 'SAC' in Settings will show a list with the previously paired sensors.

Note: if Bluetooth or SAC category sensors were disabled, the device will notify the user and prompt if settings should be changed for an enabled Bluetooth and sensor feature.

This list is grouped and ordered based on the range of the sensor, and its last known connection date.
The first item would be a connected and present sensor. If there is no connected sensor, the sensors in range will be shown, and under them the sensors that are paired with the device, but are not in range.
These list items will be further ordered by the date of last connection, so the latest sensor will be found at the top.

If there is not any paired sensor yet, new ones can be connected by tapping the plus sign on the bottom of the screen.

After tapping the plus sign, the available sensors in range will be shown.

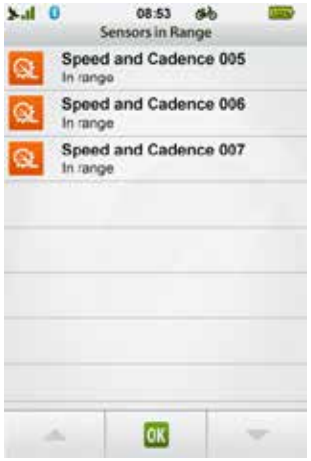

List of sensors in range

Note: a sensor that is not in range during the attempt, will not be shown in the list, thus pairing won't be available.

In Speed and Cadence settings, the icon next to the sensors name is to indicate the status of the connection to the sensor.

Tap on a sensor, then select 'OK' ( ) from the popup dialog to connect, and select 'No', to just select it.

Tap on a sensor, then select bin icon ( ) to forget the sensor.

Selecting a sensor, and tapping on the settings button ( ), will bring up the settings menu. This menu contains options for changing the name of the sensor.

Affects only TEASI PRO & Affects only TEASI ONE^3

In this menu, also the wheel settings can be calibrated
Tap on the name of the sensor to rename it, and on the rim / wheel circumference to set them.

SAC - Speed Sensor Calibration

The 'Rim' button gives you the possibility to select a standard rim, which will set an average value for the wheel circumference. You can still adjust the correct size of the *circumference*, by manually enter the exact value inside the 'Wheel Circumference' field.

'Wheel *Circumference'* is used to calculate correctly the speed from your Speed sensor.

Renaming the sensor:

Edit name of sensor

Tap 'OK' (

) to set the new name, or back button to cancel.

3.8.3.8.1. Setting Wheel Size

Wheel Size can be calculated, measured, or can be gathered from wheel size table.

Calculating Wheel Size

Calculating Wheel Size

Wheel size in mm can be calculated if the height (diameter) of the wheel is known. Wheel size is = diameter (mm) * 3.14.

Measuring Wheel Size

Measuring Wheel Size

Wheel size is equivalent to one full rotation of the wheel. Measuring the distance covered by one full rotation will result in wheel size.

Wheel Size Table

47-305	16x1.75x2	1272
47-406	20x1.75x2	1590
37-540	24x1 3/8 A	1948
47-507	24x1.75x2	1907
23-571	26x1	1973
40-559	26x1.5	2026
44-559	26x1.6	2051
47-559	26x1.75x2	2070
50-559	26x1.9	2089
54-559	26x2.00	2114
57-559	26x2.125	2133
37-590	26x1 3/8	2105
37-584	26x1 3/8x1 1/2	2086
20-571	26x3/4	1954

32-630	27x1 1/4	2199
28-630	27x1 1/4 Fifty	2174
40-622	28x1.5	2224
47-622	28x1.75	2268
40-635	28x1 1/2	2265
37-622	28x1 3/8x1 5/8	2205
18-622	700x18C	2102
20-622	700x20C	2114
23-622	700x23C	2133
25-622	700x25C	2146
28-622	700x28C	2149
32-622	700x32C	2174
37-622	700x35C	2205
40-622	700x40C	2224

Wheel Size Table

If the tire type is known, this table will contain the Wheel size values in mm in the green field.

Affects all models

3.8.4. Language

Language selection

In **Language** you can select the language for the user interface.

Browse the languages with the up and down arrows (and) tap on the desired language to select, then OK ( ) to accept the change.

1.1.2. Date & Time

Date & Time settings

In **Date & Time** the automatic (from GPS), or manual (Manual) setting can be chosen.

You can also change the Date & Time format.

Date can be “Day / Month / Year”, “Month / Day / Year”, or “Year / Month / Day”.

Time can be AM/PM or 24 hours.

When Automatic time is chosen, you need to set your own Time Zone.

When Manual setting is chosen, Date and Time can be set.

1.1.3. Sound

Sound settings

In **Sound** settings you can set certain settings connected to sounds.

If you want Teasi to emit a sound when you tap over the screen, then select the “Screen” option.

If you want a warning beep when a navigation instruction is approaching, then select the “Navigation” option.

Sound frequency can also be set here from 950 Hz to 3500 Hz.
If you want to lower the pitch of beeping, move the slider to the left.
To set a higher pitched beep, move the slider to the right.

1.1.4. Screen

Screen settings

The Screen settings contain options related to skin, brightness, timer, and screen calibration.

The skin selector is to change between 'Dark', 'Light', and 'Auto' skins, for different lighting conditions.

Auto feature changes the 'Dark' and 'Light' skins based on the sunset and sunrise based on the devices actual GPS position and time settings.

In **Screen two different** brightness settings can be changed by moving their slider.

The slider presented by the icon: is the **standby brightness.**

The slider presented by the icon: is the **operational brightness.**

The timers for the Backlight can also be set here: tap on the slider, and move it to the desired value, then press OK ( ) button to accept the changes.

Screen calibration can also be started from here. After tapping on "Start" Screen Calibration, please tap on the cross lines firmly. The procedure will repeat until the calibration is successful.

1.1.5. GPS Status

GPS Status shows the availability of nearby GPS Satellites for orientation of the device and the quality of the received signal.

GPS Status display

GPS reception status, and location of individual satellites is presented on this screen.
Under current location in Latitude and Longitude the location of satellites is displayed.

On the bottom of the screen current health of each GPS Satellite is presented. The higher the values, the stronger the signal is.

1.1.6. Info

Information about BikeNav Teasi One

In **Info** it is possible to:

- Check the version numbers of the software.
- Read the End-User License Agreement by selecting “EULA” ( )
- Check the copyrights.
- Reset the device to factory defaults by tapping on “Reset” ( ) and selecting yes in the confirmation query.

Affects only TEASI VOLT

1.1.6.1. Share Diagnostics Screen

Share diagnostic info

On this screen it is possible to decide whether to share diagnostic info.

The data Teasi collects is completely anonymous, and does not affect the privacy of users in any way.
The data consists of bike and battery information, and device settings,
so learning algorythm, and user experience can be improved.

1.1.7. E-bike Info

Detailed information about currently connected E-bike is shown under E-bike Info.

E-bike related Information

The Unique Id if the E-bike, the software and firmware version, gear type, and useful battery information are presented here.

> **Some of the fields displayed may be empty or not available for some bike models*

Affects all models

4. Connect Teasi to your Computer / The TEASI Tool

TEASI Tool is the universal online tool for your TEASI. It allows you to manage everything related to your TEASI like updating the software and the operating system, install and update additional maps, as well as manage your routes on the device, download them or upload them to the device.

Please register your TEASI on the TEASI website **www.teasi.eu** and download the TEASI tool from there for the first time and install it on your PC or Mac.

At the start of TEASI Tool you will see the following display:

Note: As soon as there is a new version of TEASI Tool available, TEASI Tool will download it first and then updates itself automatically.

Now, please turn on your TEASI and connect it via PC USB cable with your PC as soon as it is started. Tap on “Connect to PC” on the TEASI screen.

If new software is available for your TEASI, you will receive a note and you can download it now to bring your TEASI up to date. We always recommend using the latest software and maps for your TEASI because we are constantly striving to make improvements and enhancements available to our TEASI customers as soon as possible.

On the tab “maps” you will find the available maps on the left side and on the right side are the maps installed on your TEASI.

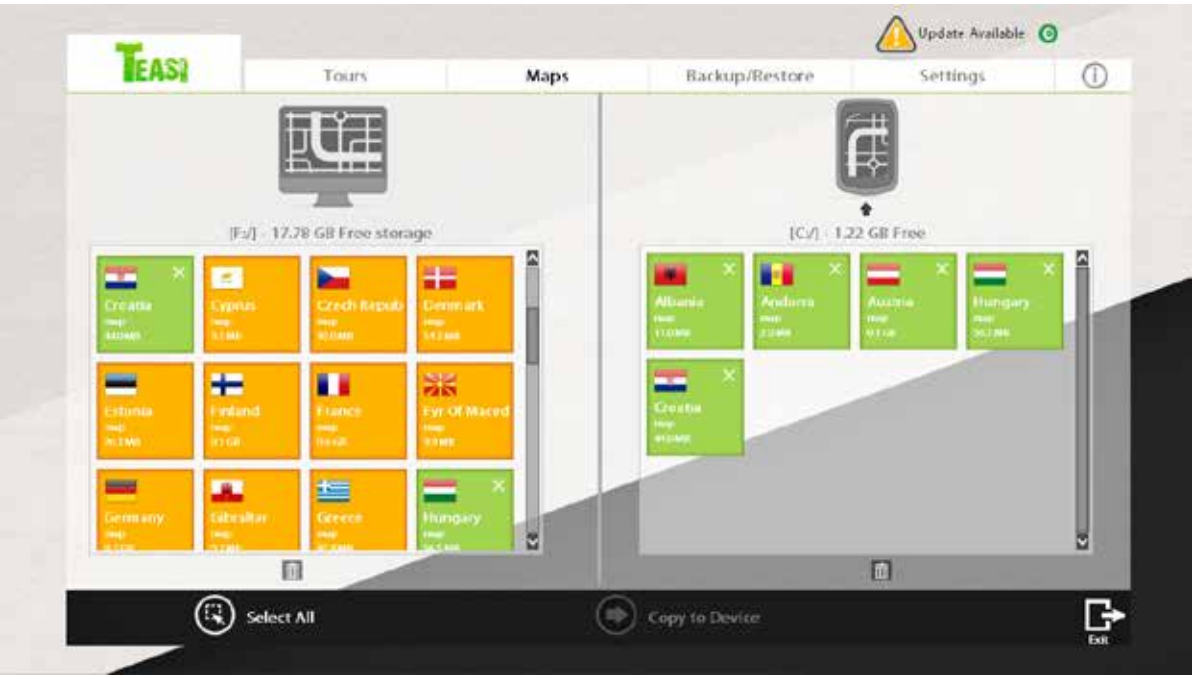

Note: If you have a Micro SD card installed in your TEASI it will be recognized by the TEASI Tool and displayed for selection in the right windowpane next to the TEASI.

For performance reasons we recommend to always store maps, POIs, tours, etc. in the internal memory of your TEASI.
To free up internal memory you can delete maps you do not need in the TEASI Tool (right) of your TEASI (simply click on the X in the upper right corner of the tile) and load them via TEASI Tool to your TEASI (free of charge) any time.

To do this, or if you want to install additional maps to your TEASI, simply drag a tile with a map from the left to the right. At the bottom of the respective tile a progress bar is displayed that shows how many maps have already been downloaded from the internet (left) or how much of the map was already transferred to your TEASI (right). The progress bar will disappear after successful transmission.

On the Tracks tab, file transfer can be done between your local computer, a bikemap.net or wandermap.net account, or tracks can be downloaded from TourBook. These are Teasi Tour tracks with POIs and rich description.

4.1. Troubleshooting for connecting Teasi devices with Mac OS X 10.11 (El Capitan)

If you should have difficulties to connect your Teasi device with your Mac, please plug the device to the computer and reboot the Mac with the device still plugged in.

Afterwards, please start the Teasi Tool and install all the updates that should be offered.

5. Declaration of Conformity

Hereby Baros GmbH, declares, that the devices TEASI one, TEASI one 3, TEASI pro and TEASI volt are in compliance with the essential requirements and other relevant regulations of Directive 1999/5/EC.
The Declarations of Conformity can be found at: www.a-rival.de

CE